

## LD40 PARTS LIST

NO.	DESCRIPTION	NO.	DESCRIPTION
	Hex Bolt	39.2	Light Guide
2	Washer	39.3	Button
3	Top Cap	39.4F	PCB
4	Dust Cap	39.5	Screw
5	Hex Bolt	39N	Control Board Assy.
6	Air Cap	39.1	Control Board
7	Valve Assy	39.2	Light Guide
<b>8</b>	<b>O-Ring</b>	39.3	Button
<b>9</b>	<b>O-Ring</b>	39.4N	PCB
10	Gasket	39.5	Screw
<b>11</b>	<b>Driver Blade Unit</b>	40	Spring
11.1	Snap Ring	41	Trigger
11.2	Sealing Ring	42	Dust Ring
11.3	O-Ring	43	Spring
11.4	Driver Blade Unit	44	Sleeve
	Driver Blade	45	Pawl
	Psiton	46	Washer
<b>12</b>	<b>Cylinder</b>	47	Hex Bolt
<b>13</b>	<b>O-Ring</b>	48	Hex Bolt
<b>14</b>	<b>Bumper</b>	49	Adjusting Piece Assy.
15	Dust Stopper	49.1	Pin
16	Rubber Pad	49.2	Pin
17	Screw	49.3	Hex Bolt
18F	Housing(R)	49.4	Spring
18N	Housing(R)	49.5	Retainer
19	Locating Ring	49.6	Bolt
20	Snap Joint	49.7	Adjusting Nut
21	Rubber Retainer	49.8	Spring
22	Upper Filter Net	49.9	Steel Ball
23	Lower Filter Net	49.10	Adjusting Piece
24	Retainer	49.11	Adjusting Nut
25	Seal	49.12	Retainer
26	Bgl Bearing	49.13	Magnet
<b>27</b>	<b>O-Ring</b>	<b>49.14</b>	<b>O-ring</b>
28	Pin	49.15	Universal Adaptor
29	Gear	49.16	φ16 Pipe Clamp Holder Adaptor
30	Transmission Wheel Assy	49.17	φ20 Magnet Pipe Clamp Holder Adaptor
30.1	Spring Stop	49.18	Magnet
30.2	Spring	49.19	φ20 Cable Wire Clip Adaptor
30.3	Pin	49.20	Pipe Strap Clamp Adaptor
<b>30.4</b>	<b>Spring Stop</b>	49.21	Pipe Clamp Adaptor
<b>30.5</b>	<b>Spring</b>	49.22	Concrete Nail Adaptor
30.6	Bearing	49.23	Threaded M6 Concrete Nail Adaptor
30.7	Magnet	49.24	Threaded M8 Concrete Nail Adaptor
31	Parallel Key	49.25	Threaded Stud Adaptor
32	Hex Bolt	49.26	φ32 Cable Wire Clip Adaptor
33	Cylinder	50	Driver Guide Cover
<b>34</b>	<b>Hall Sensor Module</b>	50.1	pin
	Hall Element	50.2	Driver Guide Cover
	Spacer	50.3	spring
<b>35</b>	<b>Micro Switch Assy</b>	50.4	Hex Bolt
	Micro Switch	51	Magazine Assy.
	Wire w/Terminal	<b>51.1</b>	<b>Bushing</b>
36	Reducer Assy.	51.2	Nose
36.1	Reducer Housing	51.3	Pin
36.2	Output Shaft	51.4	Screw set D
36.3	Gear	51.5	Spring Pin
36.4	Ring Gear I	51.6	Coil Spring
36.5	Carrier I	51.7	Pusher
36.6	Pin	51.8	Spring
36.7	Gear	51.9	Pusher Seat
36.8	Carrier II	51.10	Magazine
36.9	Ring Gear I II	51.11	Bracket
36.10	Gasket	51.12	Spring Pin
37	Pin	51.13	4-Arm Knob
38	Motor Assy.	52F	Housing(L)
38.1	Screw	52N	Housing(L)
38.2	Reducer End Cap	53	Hook
38.3	Motor	54	Hex Bolt
39F	Control Board Assy	49.27	Spring Pin
39.1	Control Board		

Parts marked in **red** are in stock

